




BSVillage
PISCINE - WELLNESS - OUTDOOR

MANUALE di MONTAGGIO


Rullo Avvolgitore PLUS per Coperture Isotermiche



www.bsvillage.com

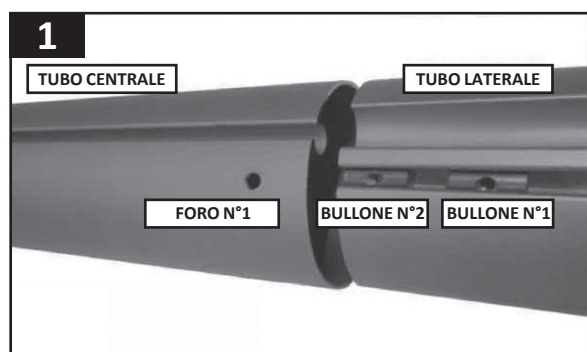

Inserire i due bulloni di metallo attraverso un'estremità della guida del tubo laterale.

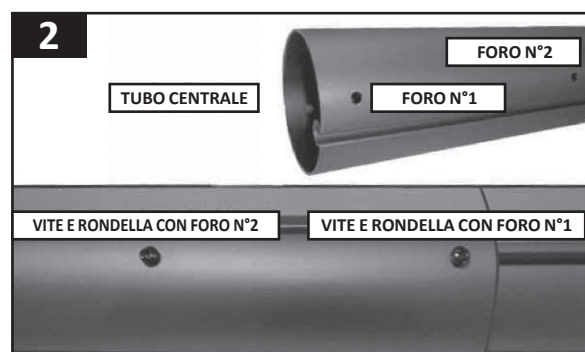


Inserire uno dei tubi laterali nel tubo centrale. Spingere il tubo fino a quando il bullone n°1 è opposto al foro n°1.
Spingere il tubo centrale fino a quando il bullone n°2 è opposto al foro n°2.
Ripetere l'operazione sul secondo tubo laterale e adattare l'asta del rullo alla larghezza della piscina e aggiungere 10 cm, quindi avvitare la vite con la rondella senza stringere, una volta allineati i fori.



BSVillage
PISCINE - WELLNESS - OUTDOOR


www.bsvillage.com

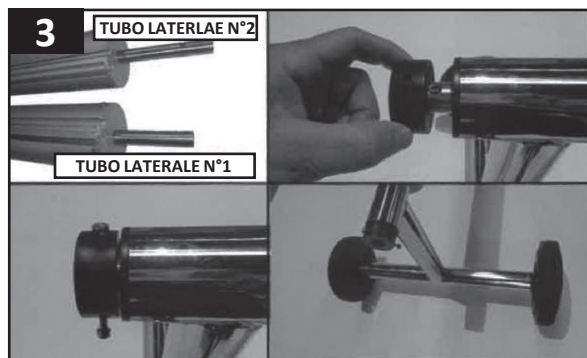


Assemblare il supporto ruota all'estremità del tubo laterale 1 e avvitare la rondella autobloccante con la sua vite.



Assemblare il supporto senza ruota all'estremità del tubo laterale 2.

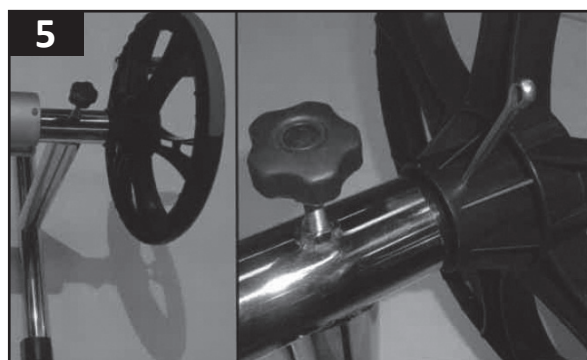


Posizionare la ruota sul tubo laterale 2 e fissarla con il perno di sicurezza utilizzando un martello.

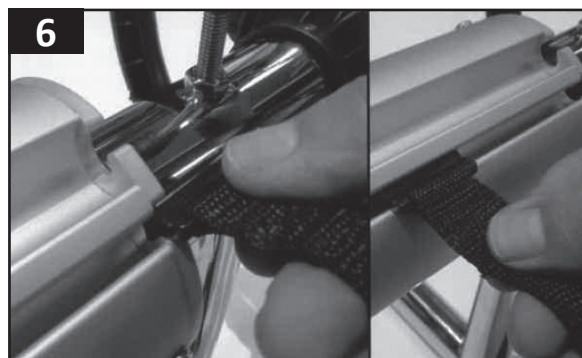

Passare le cinghie attraverso la guida longitudinale dell'albero del rullo.

Fissare l'altra estremità di ciascuna cinghia al bordo della copertura.

Posizionare le cinghie sulla larghezza della copertura lasciando intervalli regolari.

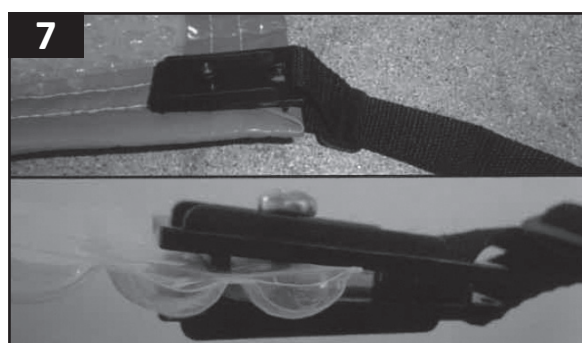


Fissare le cinghie alla fodera protettiva. Se la copertura isotermaica ha cuciture con occhielli, far passare le viti attraverso gli occhielli e stringere leggermente.

Se la copertura non ha cuciture, posizionare il bordo della fodera tra i denti dell'impugnatura e serrare con la vite.




BSVillage
PISCINE - WELLNESS - OUTDOOR

www.bsvillage.com

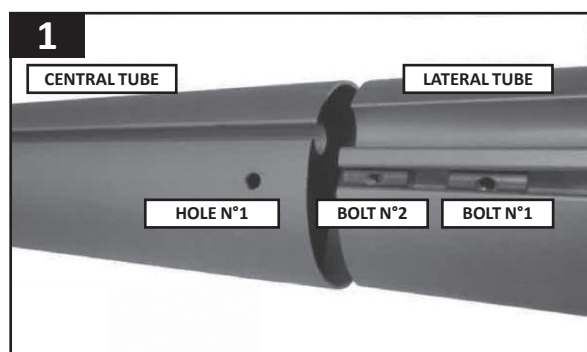

Insert two metal bolts through one end of the side tube rail.

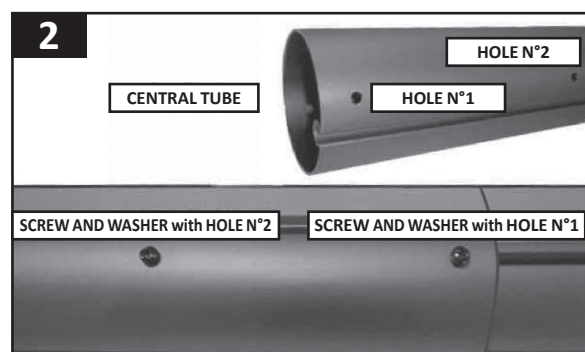

Insert one of the side tubes into the central tube. Push in the tube until bolt n°1 is opposite hole n°1.


Push in the central tube until bolt n°2 is opposite hole n°2.

Repeat the operation on the second lateral tube and adapt the roller shaft to the pool width and add 10 cm, then screw in the screw with the washer without tightening, once the holes are aligned.



BSVillage
PISCINE - WELLNESS - OUTDOOR


www.bsvillage.com

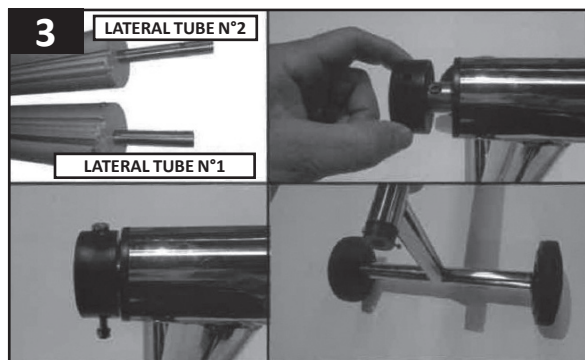


Assemble the wheel support at the end of lateral tube 1 and screw in the self-locking washer with its screw.



Assemble the support without a wheel on the end of lateral tube 2.

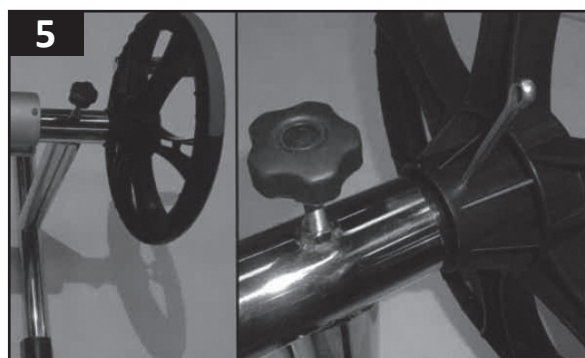


Place the wheel on lateral tube 2 and fix it with the safety pin using a hammer.

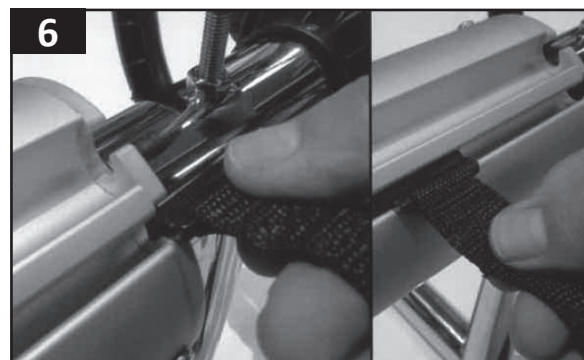

Pass the straps through the roller shaft longitudinal rail.

Attach the other end of each strap to the edge of the protective cover.

Place the straps on the width of the protective slipcover leaving regular intervals.

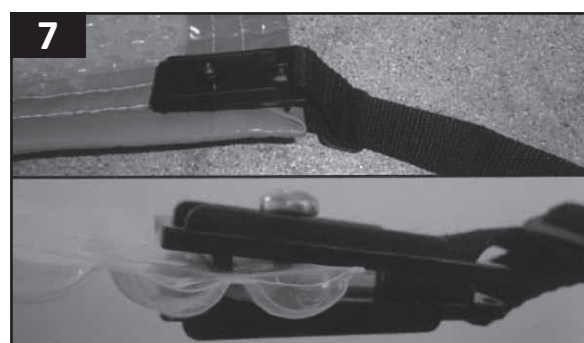


Attach the straps to the protective slipcover. If the protective slipcover has seams with eyelets, pass the screws through the eyelets and tighten slightly.

If the protective slipcover has no seams, place the edge of the cover between the grip teeth and tighten using the screw.



BSVillage
PISCINE - WELLNESS - OUTDOOR

www.bsvillage.com

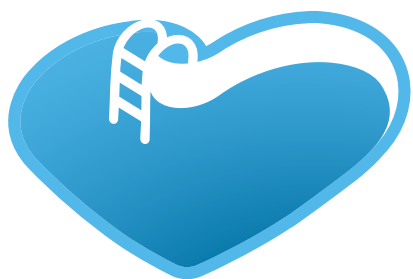

BSVillage

[.com](http://www.bsvillage.com)

PISCINE - WELLNESS - OUTDOOR

www.bsvillage.com

BUSINESS SHOP S.r.l. a Socio Unico
Via della Repubblica n. 19/1 - 42123 Reggio Emilia (RE)
P.Iva e C.F. 02458850357 - Cap. soc. 60.000,00 € i.v.



www.bsvillage.com



0522 15 36 417



info@bsvillage.com



0522 18 40 494